

OVERVIEW

This document lists the contents included in the box as well as the assembly instructions for this product. Kindly take your time to identify the hardware and individual components. We highly recommend placing the hardware and components atop a soft, carpeted and/or padded surface to protect the product and your property during assembly.

QUESTIONS?

Missing hardware or require further assistance for assembly? Email us at support@noahome.com. We're always here to help.

CLEAN AND CARE INSTRUCTIONS

- Do not dispose of any packaging contents until assembly is completed to avoid accidentally discarding hardware or components.
- Place all hardware and components atop a soft, carpeted and/or padded surface area to protect the product and your property during assembly.
- Tighten screws and components every three (3) to six (6) months.
- Over time, air and sunlight may change the colour of the fabric (fading). To prevent fading, avoid placing the bed in direct sunlight.

EXCHANGE AND RETURNS

- If you are not entirely satisfied with your purchase, we will gladly accept a return of a brand new - unopened and unassembled - product within 30 days of receipt of your delivery. The unopened and unassembled item must be in its original condition and packaging. Refunds will be processed in the original form of payment. Returns are subject to delivery and/or restocking fees.


WARRANTY

Thank you for purchasing your new Noa Home product. We hold ourselves to the highest standards of product quality and are confident you'll be pleased with your purchase. All products are carefully inspected prior to shipment. Our products carry a one (1) year warranty covering manufacturing defects. The warranty applies to household use only of our products. The product warranty does not cover normal wear and tear, scratches, discoloration, misuse, shrinkage or abusive wear.

PLEASE NOTE: If you notice that your product or its individual components are damaged upon unboxing, please notify us in writing by email at support@noahome.com within three (3) days of receipt of your delivery. In order to process a replacement part request, we will require photos of the damaged component(s) *BEFORE* they have been used for assembly. Claims made after three (3) days of receipt of delivery are subject to fees.

IMPORTANT: All claims relating to damaged components and products must be made BEFORE assembly of the product.


PARTS

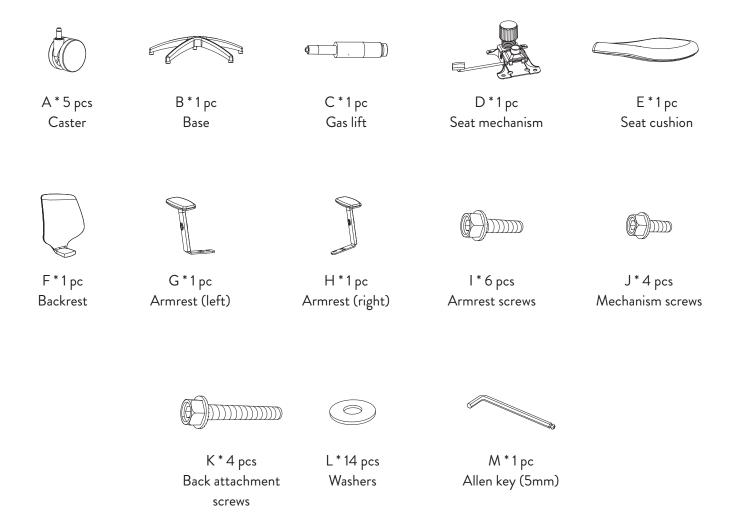

IMPORTANT


- This product is intended only for seating one person at a time.
- Do not use this chair as a step stool / ladder.
- Do not sit on any part of the chair except the seat.
- · Avoid use on uneven surfaces.
- Do not use unless all bolts, screws and knobs are properly tightened.
- Every 3-6 months, please make sure that all bolts, screws and knobs are fully tightened.

STEP 1 STEP 2 STEP 3

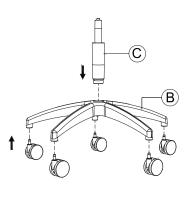

Press the casters (A) into the holes at the end of each leg of the base (B).


Insert the bottom end of the gas lift (C) into the center hole of the base (B).

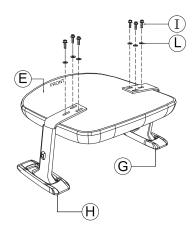

Attach armrests (G & H) to the seat cushion (E).

Insert 6 armrest screws and washers (I & L) into the pre-drilled holes as shown in the diagram above.

Tighten securely with the Allen key (M).

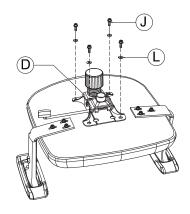


Place the seat cushion (E) face down on a flat surface.

Attach mechanism (D) to the seat cushion (E) by inserting 4 mechanism screws and washers (J & L).

Tighten securely with the Allen key (M).


STEP 4

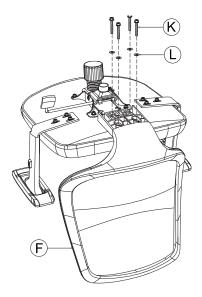

Attach the backrest (F) to the seat cushion (E).

Insert 4 back attachment screws and washers (K & L) into the 4 pre-drilled holes.

STEP 5

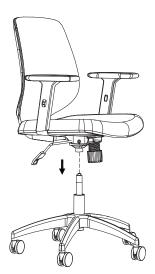


Turn the assembled seat upright and locate the center hole of the mechanism over the seat post.

Push down firmly until the connection to the gas lift is secure.


OPERATING USE

Arm height adjustment

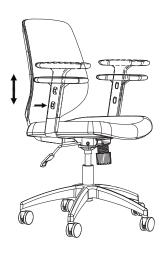

To adjust the arm height, push the button on the outside of each armrest. Move the armrest up or down. Release the button to set the height.

Seat height adjustment

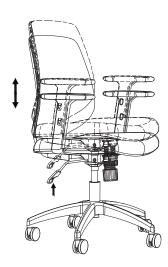

While seated, pull the lever on the right side of the seat **upwards** and hold it while raising, or lowering, the seat to change the height.

When the lever is released, the seat height is locked. The seat height adjustment range is approximately 3.54".

Back tilt adjustment



While seated, pull the lever on the right side of the seat **outwards** to unlock the tilt function. Push backwards to tilt.

To lock the backrest into the upright position, sit back up straight and push the level in.

Tilt angle adjustment



Pull out the lever to tilt the backrest at will. Push the handle inward to lock the backrest.

Tilt tension adjustment



Rotate the knob located underneath the seat clockwise or counterclockwise to adjust the tilt tension to your preferred level of resistance.

360 swivel



Your chair may rotate around 360 degrees.